


-: DIAGRAM OF SUBMERSIBLE PUMP CONNECTION FOR SYSTEM :-

**PANEL CUM OFF AUTOMATIC
SINGLE PHASE PANEL**

Note:- Over Head Water Tank, OFF Automatic.
(Overflow Control System.)

**(Pre-wired terminals
for easy connection.)**

**SUBMERSIBLE PUMP CONTROLLER
SINGLE PHASE PANEL**

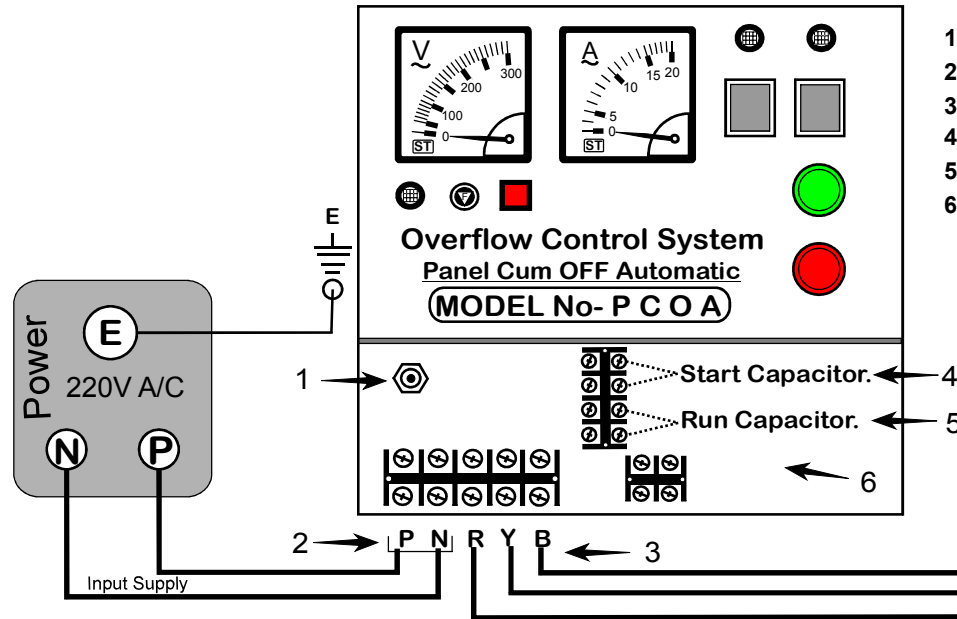

1. Reset (Circuit Breaker).
2. P - Phase, N - Neutral, or 220V A/C Supply.
3. Single Phase Submersible Pump Wire. (R Y B).
4. Start Capacitor.
5. Run Capacitor.
6. Connection Diagram Box (In Panel) For Submersible Pump.

- नोट :-**
1. इस पैनल को किसी भी कम्पनी के Single Phase Submersible Pump में उपयोग किया जा सकता है, जब की जिस कम्पनी के Submersible Pump में उपयोग से पहले, उस कम्पनी की मॉग के अनुसार पैनल में Run Cap.& Start Capacitor डालना होगा !
 2. Amp Reading के अनुसार C.B. डालना होगा !

जल ही जीवन हैं...! पेय जल, बर्वादी से बचाएँ...!



SUBMERSIBLE PUMP